

Porsche 987 997 All models CF Chrono Cover Installation Instructions

Thank you for purchasing your new Porsche Carbon Fiber Interior Part, below you will find installation instructions to help you complete the installation.

Tools Needed


Flathead Screwdriver

Torx Screwdriver

Step 1- Insert flathead screwdriver between the chrono cover lower part and dashboard, please use rag or towel to protect the finish on the dash and chrono cover, simply pry it by pushing upwards and it should just pop out.



Step 2- Unplug Harness and remove the small 4 torx screw that hold the actual chrono clock in place. Simply install the chrono in the new Carbon Chrono Cover and re-install on dashboard.

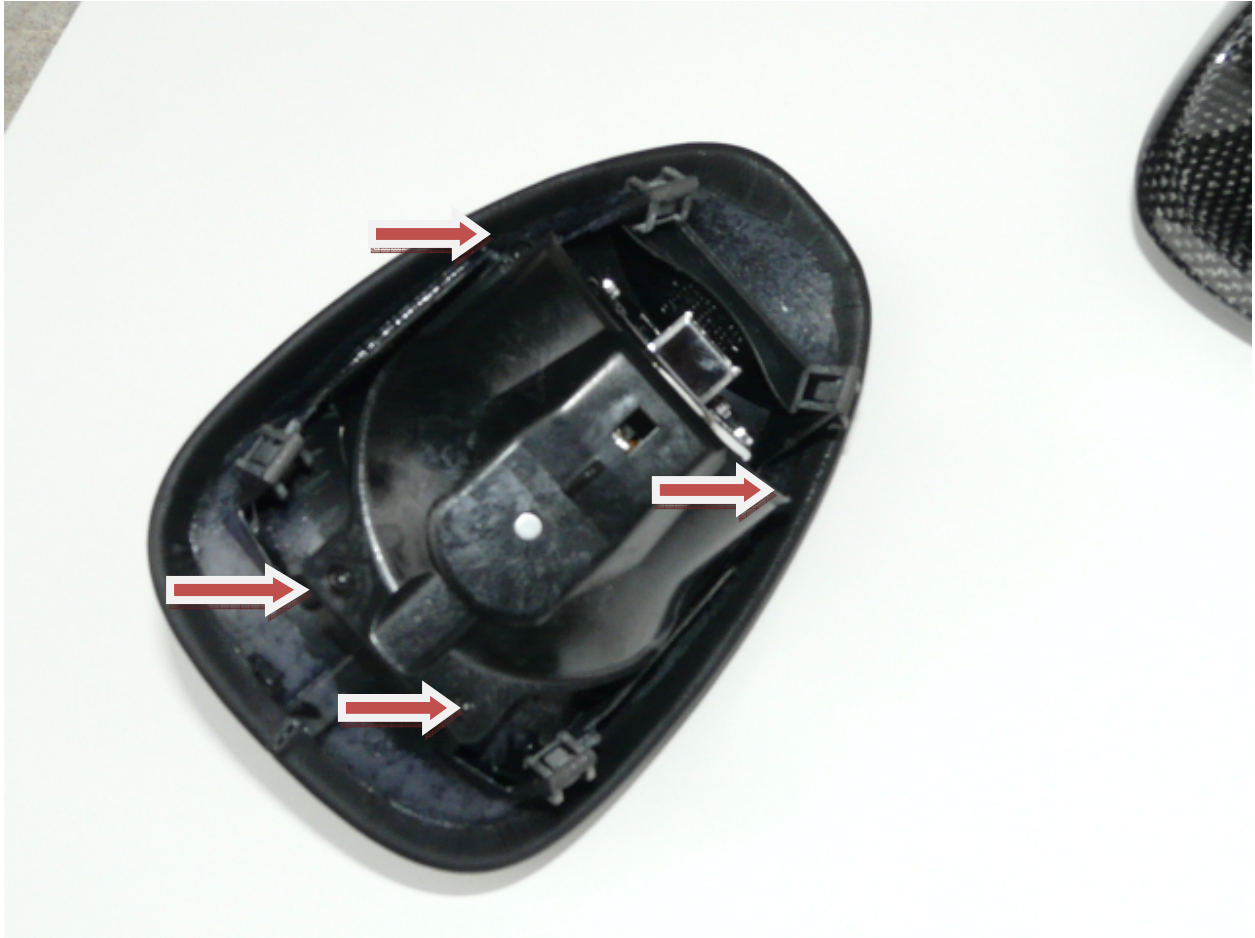

Congrats you're done Enjoy.

Questions? Please use "Submit Question" form in our [Tech Center Section](#)

Maxspeed-Motorsports.com Copyright 2010