

Porsche 996 Turbo Quad Tips Installation


Thank you for purchasing your new Porsche 996 Turbo Quad Exhaust Tips, below you will find installation instructions to help you complete the installation.

Tools Needed

Ratchet + Socket Set

Step 1- Start by removing your factory exhaust tips, if you look underneath the exhaust tips there is a 13mm bolt, you will need to loosen that bolt and remove your factory tips.

Step 2- To install your new tips they work pretty much the same as the originals, but you must install the shim correctly, this step is very important to get a good connection between the exhaust pipe and the tip. The shim I'm referring to is pictured below.

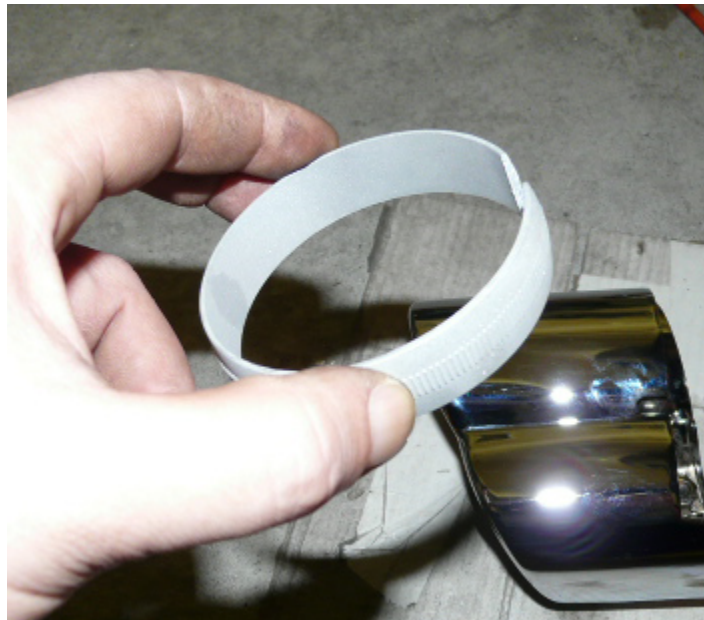

Step 3 – You will notice that the shim has an open end, you must install the shim on the opposite side of the exhaust clamping system opening, see pictures below, the 2nd picture is the correct way of installing the shim.



Step 4 – Once you have positioned your shim inside the exhaust tip, install the tip on the exhaust pipe and tighten the 13mm Bolt, you must make sure that the shim is the furthest possible inside the tip, push it with a screwdriver if needed. Once you have tighten it make sure it's nice and solid it should not move unless excessive force is applied.

Congrats you're done Enjoy.

Questions? Please use "Submit Question" form in our [Tech Center Section](#)

Maxspeed-Motorsports.com Copyright 2008