

# Porsche 987/Cayman/997 Strut Brace

## Installation Instructions

Thank you for purchasing your new Porsche Strut Brace , below you will find installation instructions to help you complete the installation.

Tools Needed

Allen Key Set

Wrench Set


**Step 1- Before installing** the Strut Brace make sure that you tighten the 3 Allen screws on each arms of the strut brace (see picture below)



**Step 2-** A-Remove battery cover by unlocking the two lock screws. B- Lift the side strips they can be easily lifted as they are attached only with Velcro, once lifted pull and remove each side covers (Left & Right).




**Step 3** – Remove two of the three Nuts on each Strut Tower, see picture below.

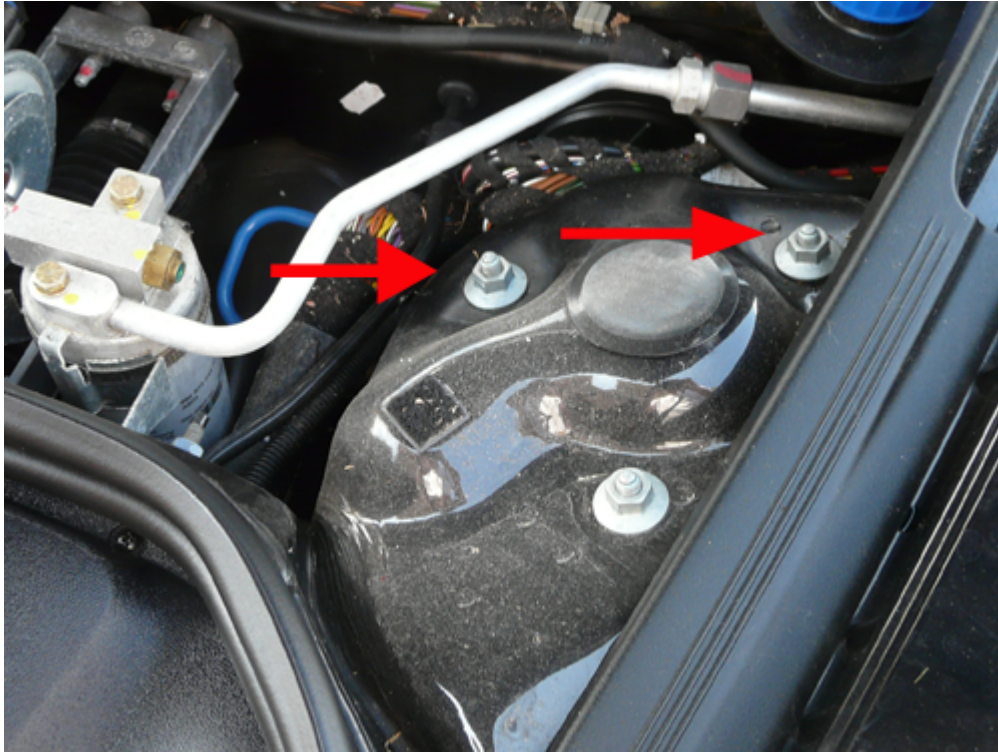

**Step 4** – Mount the Strut Brace by passing it behind the battery , mount each arm of the strut towers , if your short a few milimeters or centimetres simply rotate the arms to give it more length, once positioned you can tighten the strut brace to the strut tower with the 2 nuts previously removed on each strut tower.



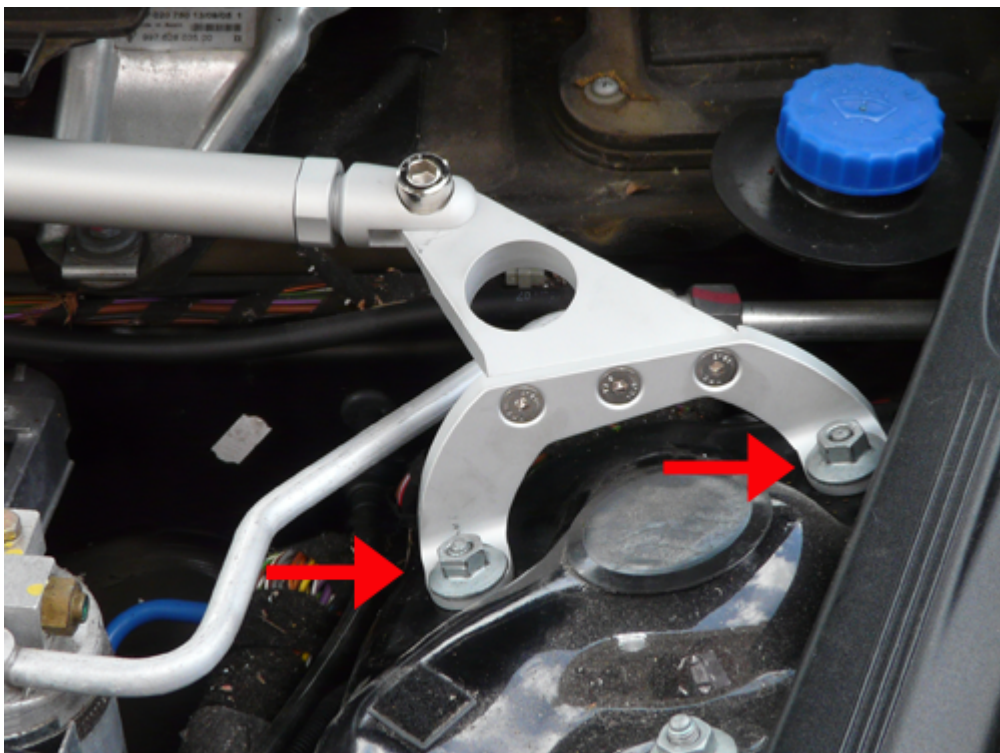

**Step 5-** You should now tighten the length adjustment bolt by hand by tightening it on the inner side of the strut brace.



**Step 6-** You should now tighten the Allen Screw and Bolt that connects the arms to the bar.



**Step 7-** Put back all your covers.





Congrats you're done Enjoy.

Questions? Please use "Submit Question" form in our [Tech Center Section](#)

Maxspeed-Motorsports.com Copyright 2008