

# Porsche Caliper Stencils Installation Instructions.

Thank you for purchasing your product at [www.maxspeed-motorsports.com](http://www.maxspeed-motorsports.com)

*Before you start please understand that these installation instructions are provided on a "as is" basis use at your own risk. Maxspeed-Motorsports will not be responsible for any damages or bodily injuries that can be caused by improper installation of our products. As always professional installation is recommended. Never go underneath your car if using a floor jack without securing it with jack stands first.*

## Tools & Materials Needed

Toothpick or Pointy Tool


Tweezers (used for cosmetics) or small long nose plier

Piece of Cardboard

Spray Can Paint (Color of your choice) I normally use spray paint that I purchase at hardware store like "Krylon" brand which has the Primer + Paint all in one. Works really well for me. Don't use paint that takes too much time to dry like epoxy paint. KRYLON All in One works great.

**Step 1-** Assuming that your caliper has been freshly painted the surface should be 100% clean.


- a) First thing is you will need to use a credit card or any ID card that is made of hard plastic and you will go over the back of the stencil a few passes, this will ensure that the stencil will peel off easily from its backing paper.

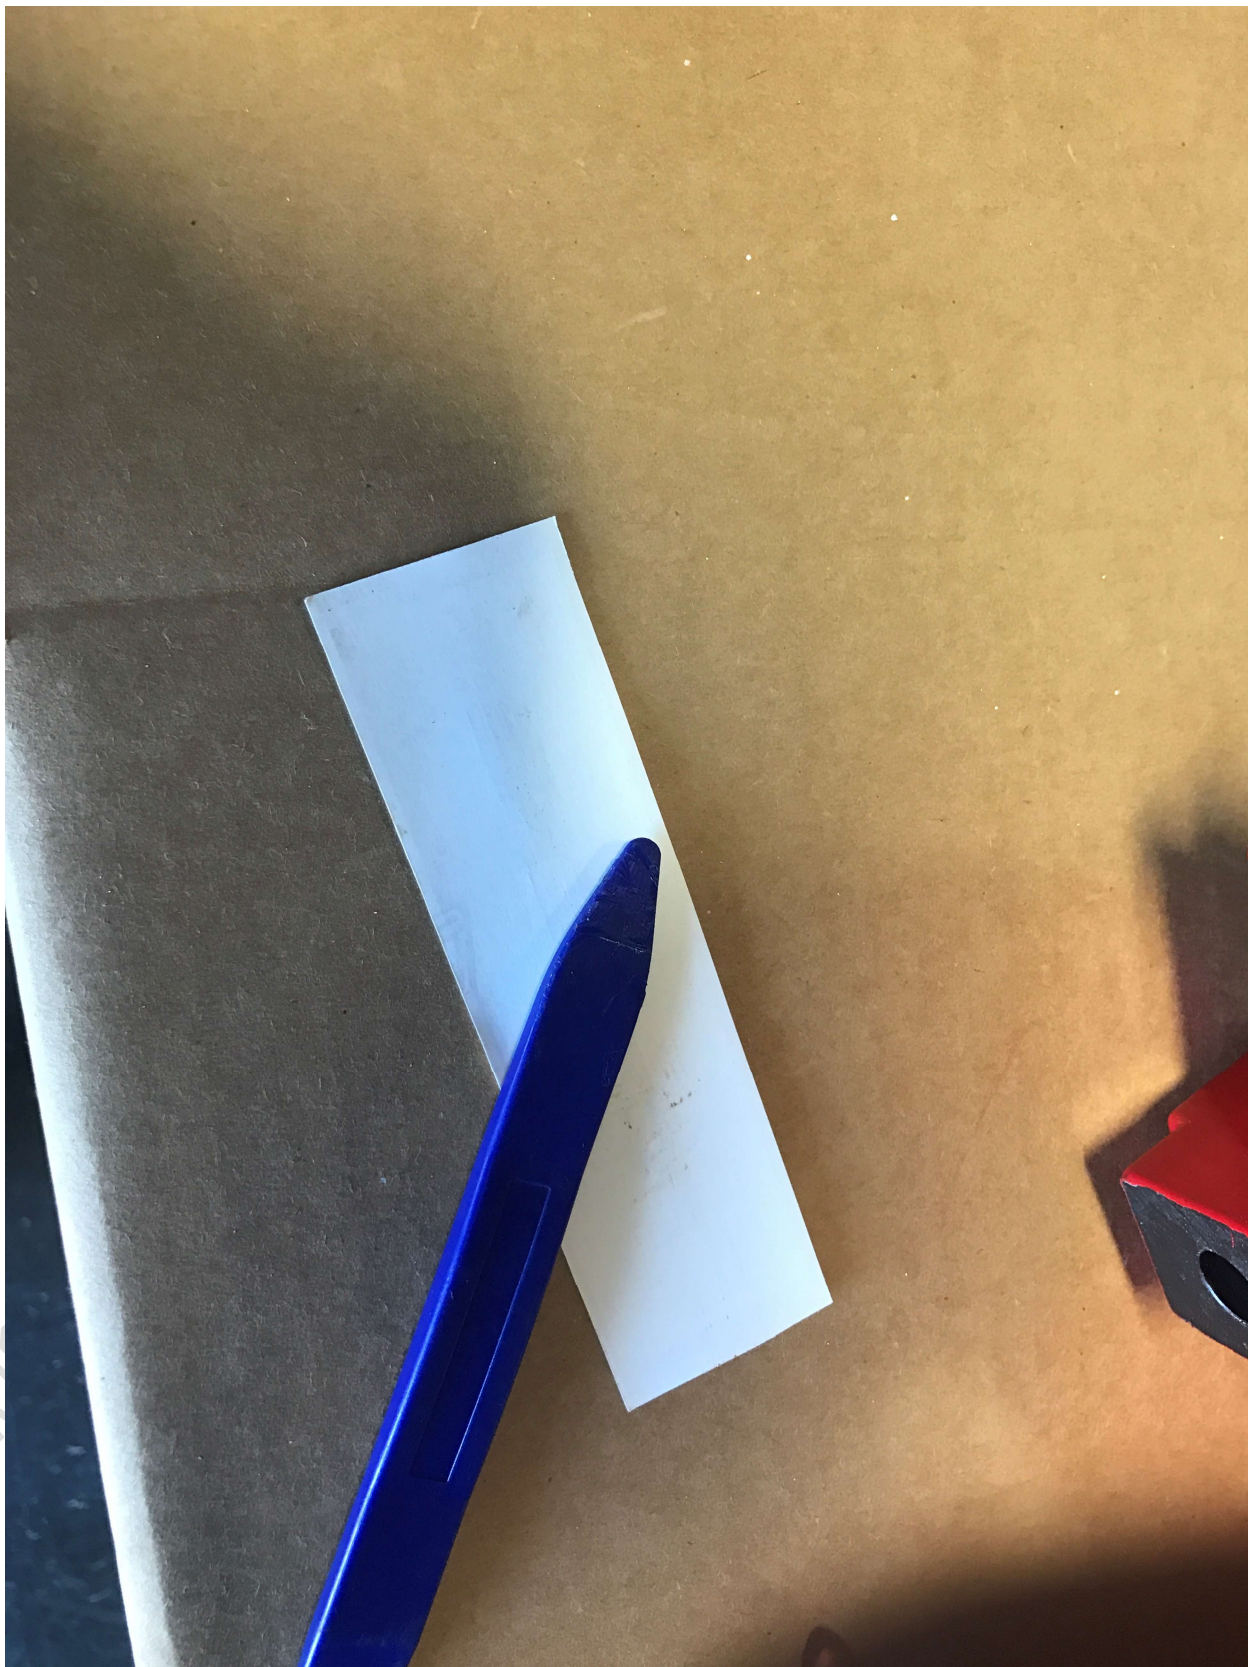

- b) Now gently and carefully peel off the stencil, and position on the caliper.

2015 Copyright Maxspeed-Motorsports.com



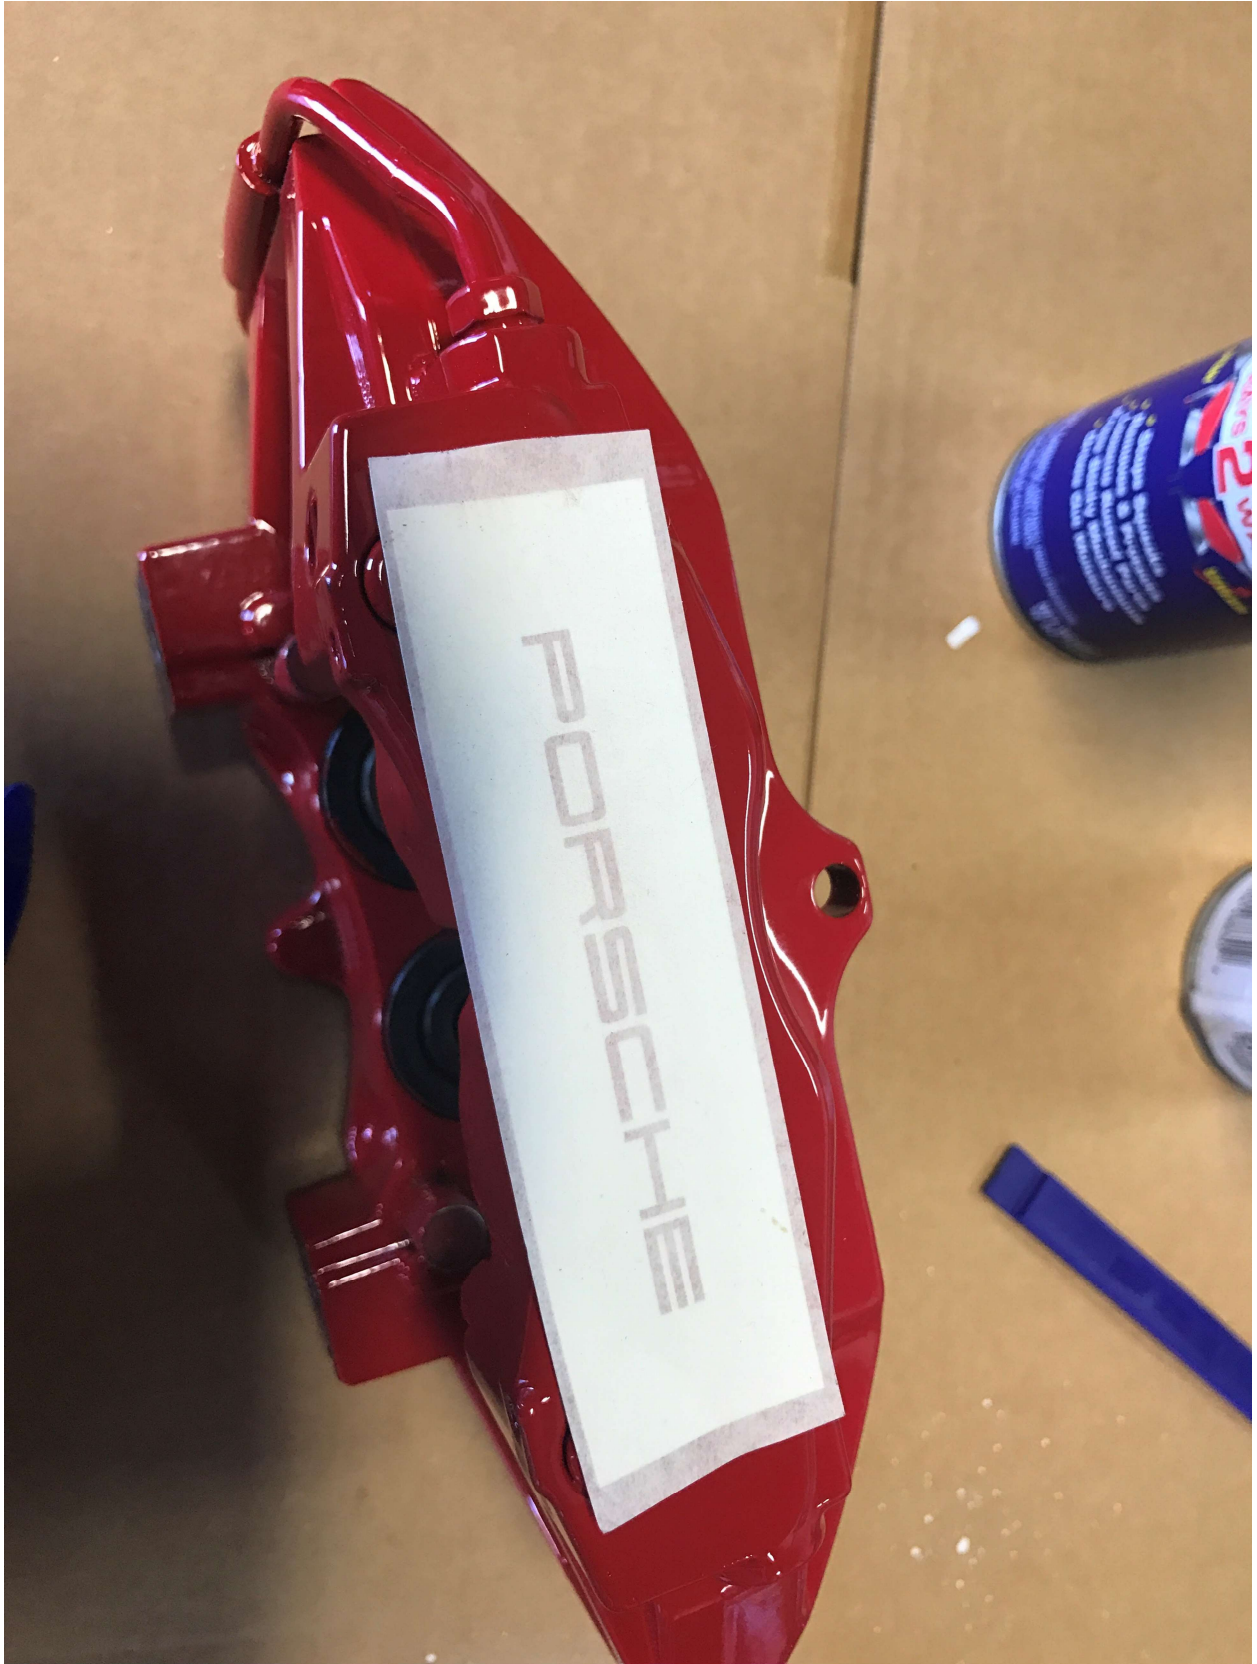

- c) Press on the stencil so that it sticks properly, now use a credit card and gently pass over the stencil a few times.

2015 Copyright Maxspeed-Motorsports.com





**Step 2-** Now make a cardboard cutout, this way when you spray paint the stencil it will not overspray on the caliper.



At this point you are ready to Spray Paint the stencil.

Start with a light coat, don't worry about coverage, just a light coat. Wait 2-3 minutes and apply another light coat, again wait 2-3 minutes and apply another

light coat till you get a solid color, don't over do it, just enough to have a solid color.

2015 Copyright Maxspeed-Motorsports.com





After your last coat wait no more than 5 minutes anywhere between 3-5 minutes is good. Now gently peel off the stencil.

**Step 3-** Now you are left with the inner part of the letter P the Letter O and the letter R , see picture below.




You will need to use a Pic Tool, or a toothpick along with a pair of small long nose pliers or tweezers (Used in cosmetics).

Start by gently using the pic tool and slowly raise the inner stickers left and grab with the small plier and remove those left over stickers.





2015 Copyright Mark

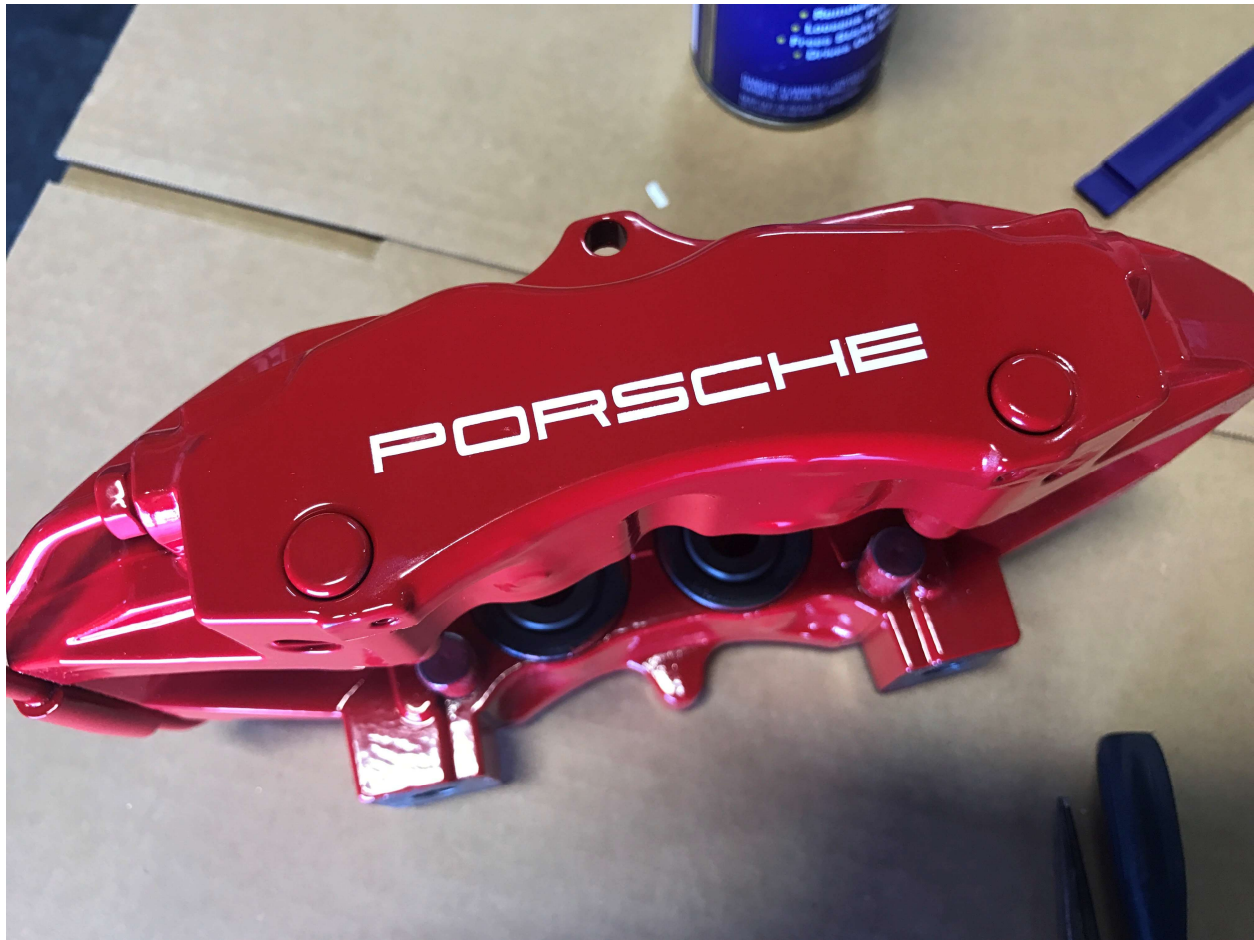

Congratulations you're done.

If you have any questions please don't hesitate to contact us via e-Mail at [sales@maxspeed-motorsports.com](mailto:sales@maxspeed-motorsports.com) or by telephone at 855.466.2977.

2017 Copyright Maxspeed-Motorsports.com

Help us improve our products and service if you have any suggestions regarding this document please let us know.