

Removal Instructions for PORSCHE 987 997 HVAC Unit

Thank you for purchasing your product at www.maxspeed-motorsports.com

Before you start please understand that these installation instructions are provided on a "as is" basis use at your own risk. Maxspeed-Motorsports will not be responsible for any damages or bodily injuries that can be caused by improper installation of our products. As always professional installation is recommended. Never go underneath your car if using a floor jack without securing it with jack stands first.

Tools & Materials Needed


Torx head Bits or Screwdrivers

Step 1- Remove the carpet trim from the center console assembly, there's a torx screw hidden in the carpet trim. Remove the two torx screw that retain the side radio trim and push the trim forward, the trim is clipped in some force may be needed to remove the trim. Remove all trims on the Left and Right sides.



Step 2- Push on the gold clips on both sides and push the HVAC Unit out, disconnect the electrical connectors.

2015 Copyright Maxspeed-M

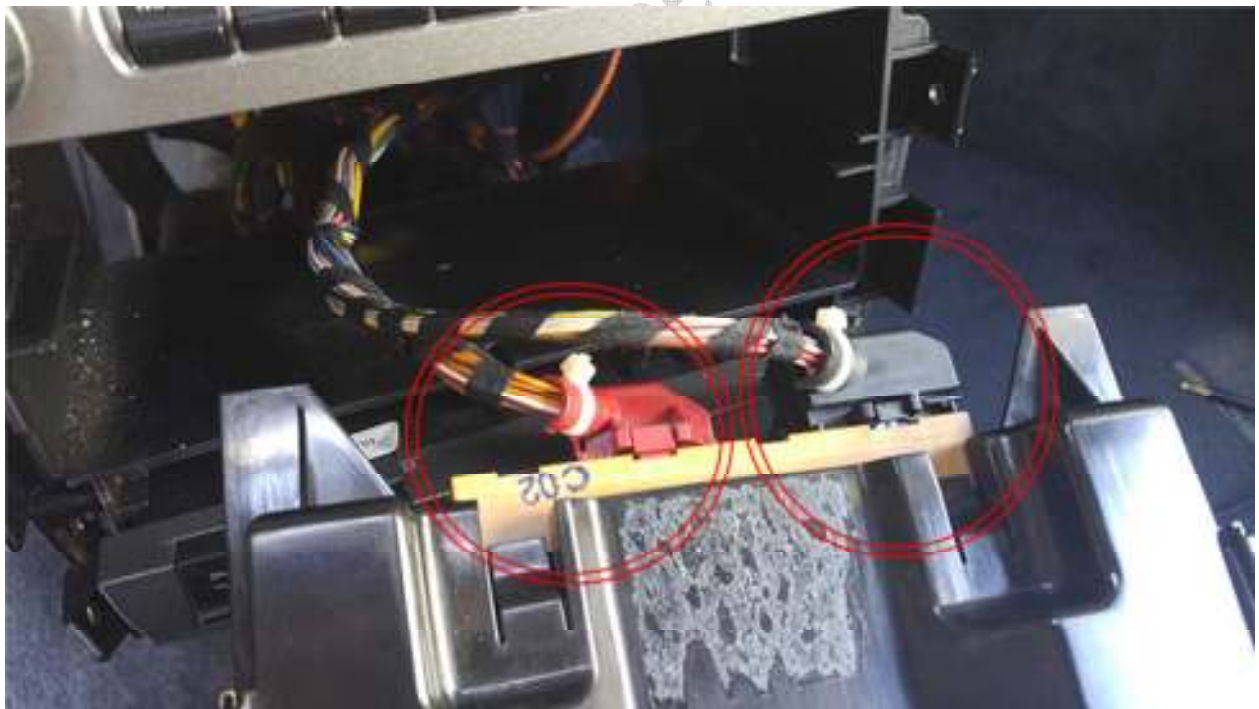

Congratulations you're done.

If you have any questions please don't hesitate to contact us via e-Mail at sales@maxspeed-motorsports.com or by telephone at 855.466.2977.

2015 Copyright Maxspeed-Motorsports.com

Help us improve our products and service if you have any suggestions regarding this document please let us know.

2015 Copyright Maxspeed-Motorsports.com